



Ready to tile over Shower Base Installation Instructions

Concrete & Timber floors

Concrete Floor - Channel drain

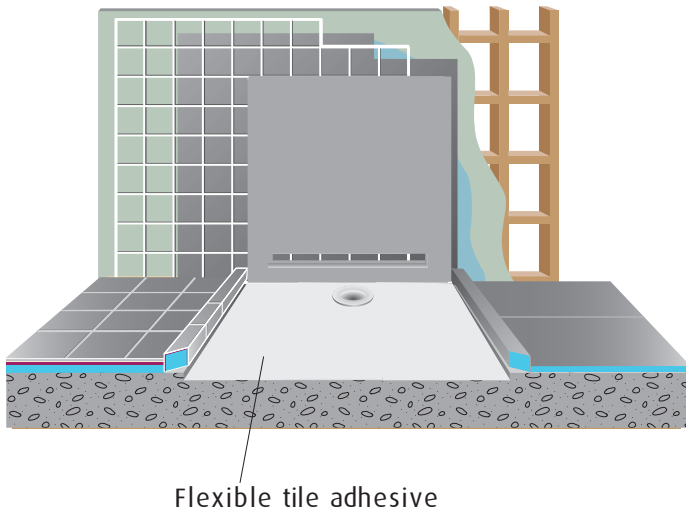

Timber Floor - Centre drain

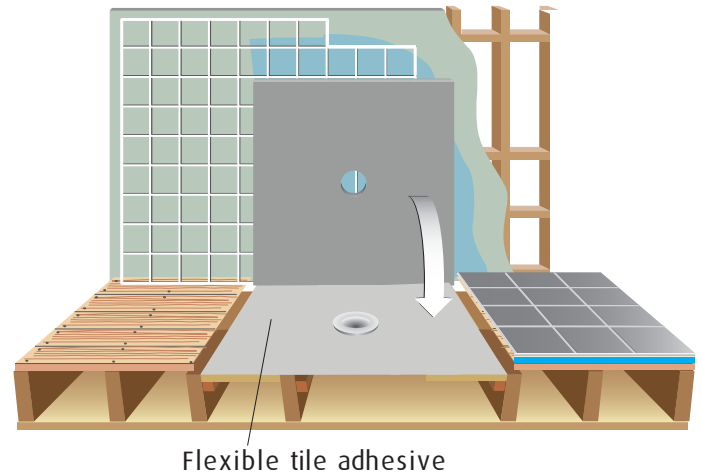

NOTE: The shower tray must be fully supported

- 1** Check that the floor is flat and level. Clean the floor area for the shower base.
- 2** Mark out the location of the waste pipe and finish all plumbing connections.
- 3** Use a flexible tile adhesive with 10mm notch trowel to fix the shower base to the floor. Place the shower base in position, apply downward pressure on the shower base and check for level.
- 4** Apply a waterproofing membrane (any non solvent based waterproofing membrane - Branz approved system) to the entire surface of the shower base and the wall lining according to the manufacturer's recommendations.
- 5** After the waterproofing dries, the shower can be tiled in the regular manner.

Marmox New Zealand Ltd

T 0800 627 669 F 09 820 7090 E info@marmox.co.nz W www.marmox.co.nz

483A Rosebank Road, Avondale, Auckland 1026 | PO Box 19144, Avondale, Auckland 1746